


## Assembly Overview:

# Fascia Cover HD Installation Guide

This guide is provided to assist you in the installation process. Additional assistance is available by calling us at 888-321-9630. Thank you for choosing Drexel Metals.

### Contents:


Assembly Overview	1
Step 1: Installing 22ga Galv. Cleat	2
Step 2: Installing Miters	2
Step 3: Installing End Caps/Terms	3
Step 4: Installing Straight Lengths	3
Detail: Fascia Cover HD	4

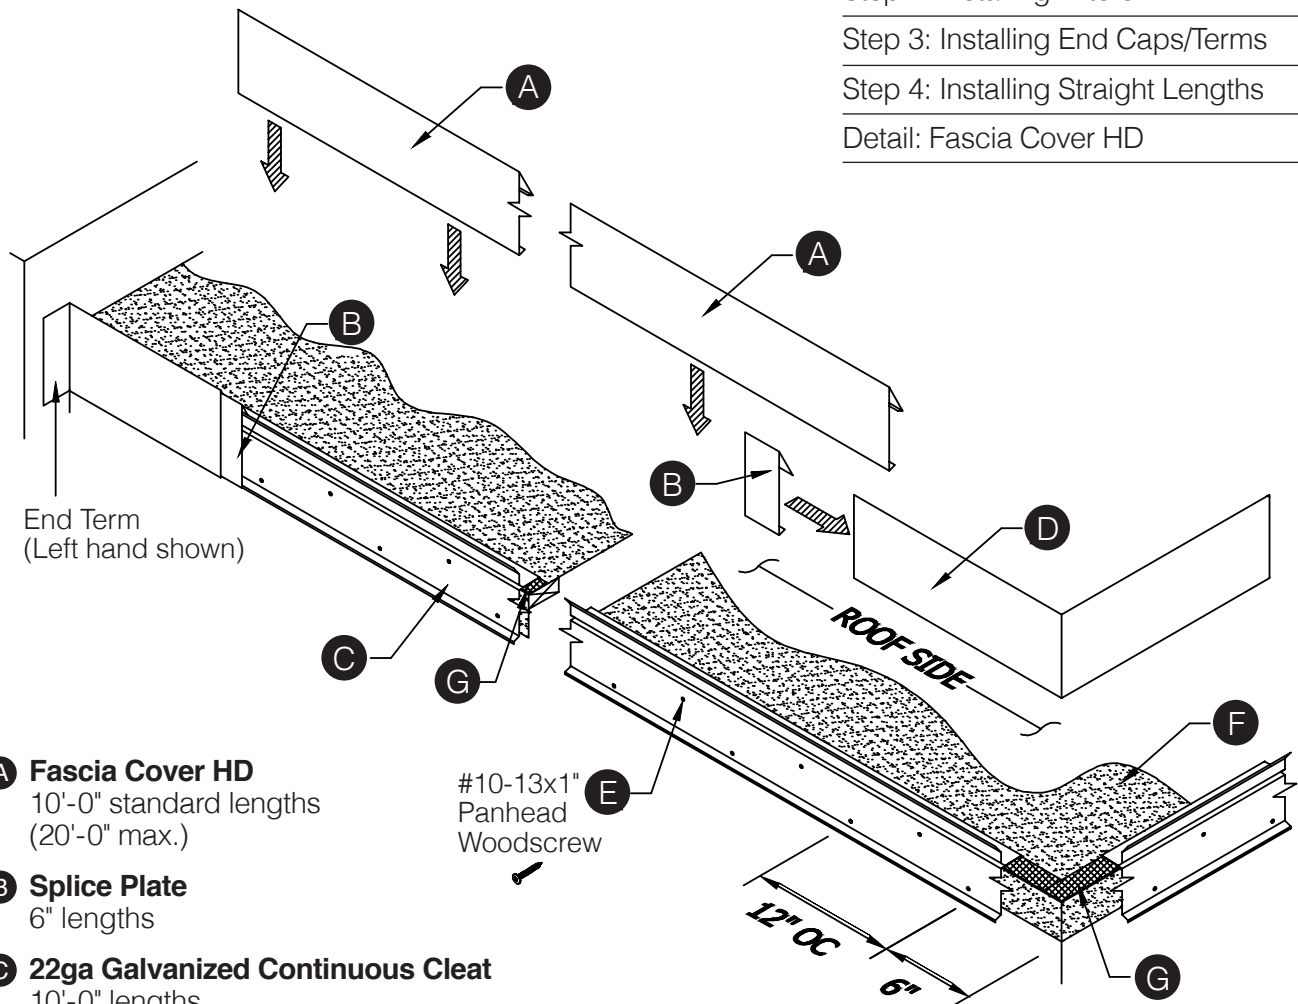

- A Fascia Cover HD**  
10'-0" standard lengths  
(20'-0" max.)
- B Splice Plate**  
6" lengths
- C 22ga Galvanized Continuous Cleat**  
10'-0" lengths
- D Fascia Cover Miter**  
(Outside corner shown)
- E #10-13x1" S.S. Panhead Woodscrew**  
at 12" o.c. staggered (6" from ends)  
(Included and required)
- F Approved Roofing Membrane**  
(By installer)
- G Water Cut-Off Mastic**  
(By installer)



**Detail: Fascia Cover HD – high-performance**

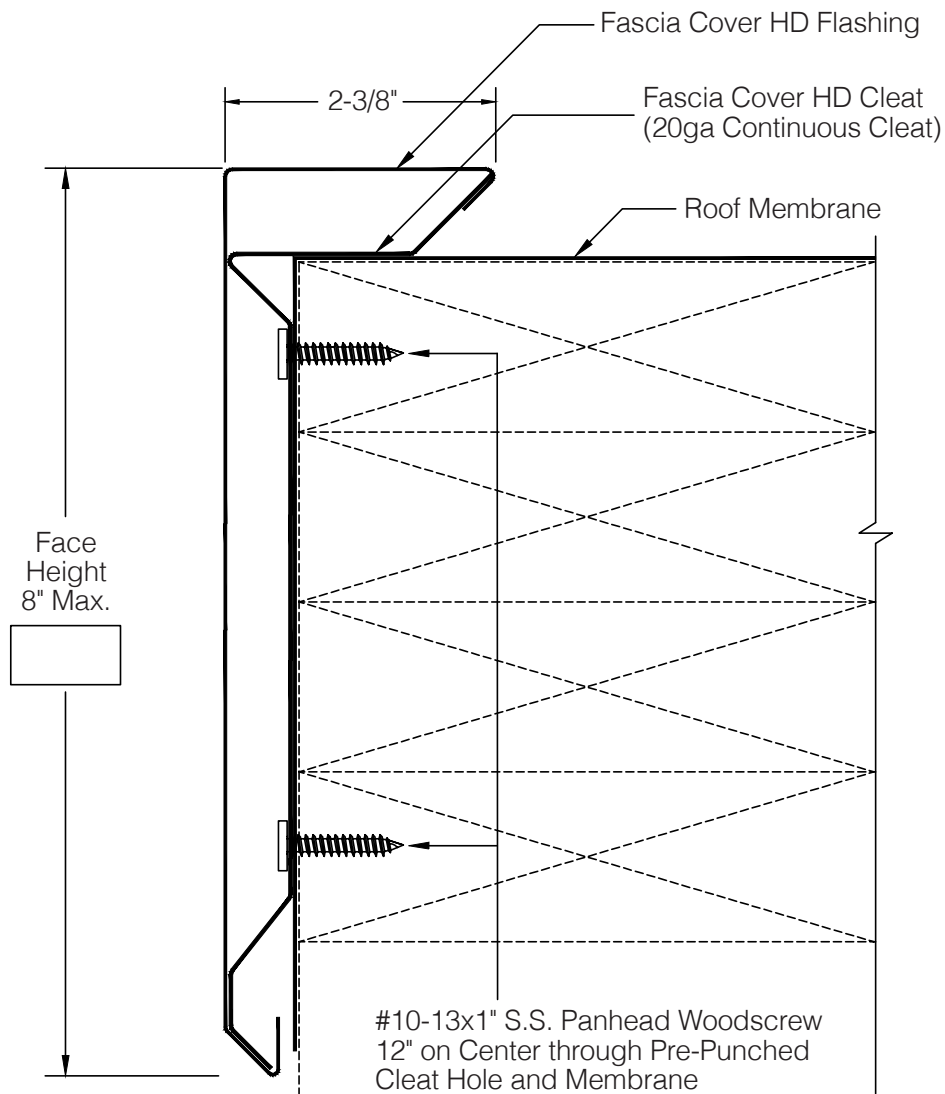

**Notes:**

1. Isolate all metal parts from ACQ treated wood or other galvanically incompatible material with appropriate membrane material.
2. Appliance attachments, such as lightning rods, signs, or antennae that penetrate the water seal, induce a galvanic reaction, or otherwise compromise the effectiveness of the roof edge system, shall be eliminated or isolated to prevent problems per section 8.0 if ANSI/SPRI ES-1. Appliances should also be isolated from, or not attached to, the roof edge system. Consult the lightning protection system manufacturer for specific attachment instructions.